



节点未通电，主机电源关闭

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/Node_not_powering_ON_Host_Power_is_Off

Updated: Fri, 31 Oct 2025 19:23:01 GMT

适用于

- ONTAP 9
- AFF 系统
- FAS 系统

问题描述

- 节点未接通电源
- 尝试通过 BMC 接通电源时失败

```
BMC> system power on
```

```
..
```

```
BMC> system power status  
Host power is off
```

- 尝试通过 SP 开机时失败

```
SP > system console  
Type Ctrl-D to exit.
```

```
Running Backup Firmware  
SP > system power status  
Host Power is off  
Running Backup Firmware  
SP > system power on  
Running Backup Firmware  
SP > system power status  
Host Power is off  
Running Backup Firmware
```

- 重新拔插节点、所有 DIMM 和 PCI 卡后，问题仍然存在