



FLI 磁盘在迁移后显示损坏

https://kb-cn.netapp.com/on-prem/ontap/da/SAN/SAN-KBs/FLI_disk_shows_broken_post_migration

Updated: 周三, 09 7月 2025 14:39:11 GMT

适用场景

- 离线 FLI
- ONTAP 9.x
- 第三方存储

问题描述

- 离线 FLI 迁移后，FLI 磁盘在 Ontap CLI 上显示为损坏。
- 所有启动器均已从交换机端的分区中移除。

```
AFF-C400::> storage errors show  
Disk: HPE-1.14
```

UID:

600C0FF0:003B55EA:6FE71563:01000000:00000000:00000000:00000000:00000000:00000000:00000000

HPE-1.14 (600c0ff0003bxxxyxyxyxy301000000): This array LUN is an unknown device.

HPE-1.14 (600c0ff0003b5xxxyxyxyxy301000000): This array LUN is only available on one path. Proper configuration requires two paths.

This disk is in a failed state with the outage reason "init failed". The Disk needs to be removed and replaced.

- 作为故障排除步骤，可以使 Ontap FC 启动器端口脱机，以确保没有与第三方存储的活动连接。