



在 Cisco MDS 交换机的分区维护期间主机磁盘无法访问

https://kb-cn.netapp.com/on-prem/Switches/Cisco-KBs/Host_disk_inaccessible_during_zoning_mainte...

Updated: Fri, 17 Apr 2026 08:46:45 GMT

适用于

- Cisco MDS 交换机
- ONTAP FC SAN

问题

- Oracle 主机在交换机维护期间失去对磁盘的访问并挂起

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'

- [Fcp ping-initiator show](#) 命令显示主机未分区

```

Node          Logical      Ping          Extended
Vserver      WWPN        Name          Interface    Status      Status
-----
SVM1
  20:00:00:25:99:43:99:99
    NETAPP001
      n1_fc_1a  not-zoned    -
  20:00:00:25:99:43:99:99
    NETAPP001
      n1_fc_1b  not-zoned    -
  20:00:00:25:99:43:99:99
    NETAPP002
      n2_fc_1a  not-zoned    -
  20:00:00:25:99:43:99:99
    NETAPP002
      n2_fc_1b  not-zoned    -
4 entries were displayed.

```