



NS224 机架显示 DIMM 为未知

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/NS224_shelf_show_DIMM_as_unknown

Updated: Thu, 16 Apr 2026 17:41:07 GMT

适用于

- NS224
- NSM100

问题

`storage show fault -v` 将 NSM100 B 模块中的所有 4 个 DIMM 显示为未知。

```
::> run local storage show fault -v
```

```
Enclosure Status: normal
```

```
Channel: 0x
```

```
Shelf: 0
```

```
Enclosure:
```

Element	Status	Status Bytes	Status Descriptions
1:	OK	01,00,02,00	FAIL

```
DIMM:
```

Element	Status	Status Bytes	Status Descriptions
1	[NSM100 A] : OK	01,00,00,00	
2	[NSM100 A] : OK	01,00,00,00	
3	[NSM100 A] : OK	01,00,00,00	
4	[NSM100 A] : OK	01,00,00,00	
5	[NSM100 B] : UNKNOWN	06,00,00,00	
6	[NSM100 B] : UNKNOWN	06,00,00,00	
7	[NSM100 B] : UNKNOWN	06,00,00,00	
8	[NSM100 B] : UNKNOWN	06,00,00,00	