



更换主板后、系统启动失败、并显示"WARNing: 0 disks found (警告:发现0个磁盘)"错误

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/System_boot_up_fails_up_with_WARNING_...

Updated: 周六, 12 7月 2025 13:58:33 GMT

适用场景

- 更换主板
- 硬件更新

问题描述

• 系统无法 启动并反复重新启动、并显示以下错误:

WARNING: 0 disks found!

Storage Adapters found:

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'

- O Fibre Channel Storage Adapters found!
- 2 SAS Adapters found!
- O Parallel SCSI Storage Adapters found!
- 0 ATA Adapters found!

Target Adapters found:

- O Fibre Channel Target Adapters found!
- 2 iSCSI Target Adapters found!
- 1 Unknown Target Adapters found!

WARNING: there do not appear to be any disks attached to the system. Jan 15 18:49:54 [localhost:cf.fm.noMBDisksOrIc:warning]: Could not find the local mailbox disks. Could not determine the firmware state of the partner through the HA interconnect.

No root volume found.

Jan 15 18:49:55 [localhost:zapi.sf.up.ready:info]: ZAPI: system node stable after startup.

Rebooting... (press ctrl-c during boot to break reboot loop)

Uptime: 1m17s

System rebooting...

• 即使在完成主板更换操作步骤后、旧主板仍然是磁盘所有者。

*> disk show -v

DISK

Local System ID: 333333333

OWNER

HOME		DR HOME		CHKSUM			
• • • • • •							
0a.00.8	node-1	(111111111)	Pool0	Y5bxxxxxxxxx	node-1		
(111111111)	Block						
0b.00.11	node-1	(111111111)	Pool0	Y5cxxxxxxxxx	node-1		
(111111111)		Block					
0a.00.10	node-1	(111111111)	Pool0	Y5dxxxxxxxxx	node-1		
(111111111)	Block						
0b.00.3	node-1	(111111111)	Pool0	Y5exxxxxxxxx	node-1		
(111111111)			Block				

POOL SERIAL NUMBER

0b.00.9	node-1	(111111111)	Pool0	Y5fxxxxxxxxx	node-1		
(11111111)	(111111111) Block						
0b.00.5	node-1	(111111111)	Pool0	Y5gxxxxxxxxx	node-1		
(11111111)			Block				