



序列号位于AFF存储系统的哪个位置?

 $https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/Where_is_the_serial_number_located_on_a...$

Updated: 周六, 12 7月 2025 16:00:52 GMT

适用场景

- AFF A系列系统
- AFF C系列系统
- · ASA A系列系统
- ASA C系列系统
- 序列号位置

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'

问题解答

 
平台

序列号位置

AFF A1K ASA A1K

存储系统背面的管理模块上。

Bezel Removed



(System Serial Number is on the Management module)



4u


Bezel Removed

AFF A90 \ ASA A90 AFF A70 \ ASA A70

存储系统背面的管理模块上。



(System Serial Number is on the Management module)

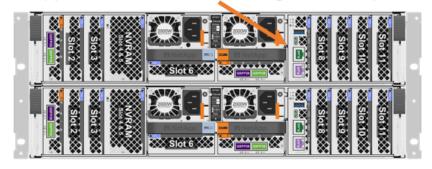


Bezel Removed



AFF A150 ASA A150

 存储系统背面、端口e0c/0c-e0d/0d上方。



Bezel Removed



Left to Right Disk Numbering

AFF C190

存储系统背面、端口e0c/0c-e0d/0d上方。

(Each Controller has its own System Serial Number)



Bezel Removed

2u

0 Left to Right Disk Numbering 23

AFF A200

存储系统背面、端口eOc/Oc-eOd/Od上方。



平台 序列号位置

Bezel Removed

2u

O Left to Right Disk Numbering 23

AFF A220

存储系统背面、端口e0c/0c-e0d/0d上方。

 
(Each Controller has its own System Serial Number)



AFF A250 \ C250 ASA A250 \ C250

存储系统背面、电源和串行控制台端口之间。

Bezel Removed





Bezel Removed

3u FAN 1 FAN 2 FAN 3

AFF A300

存储系统背面、在插槽2下。



(Each Controller has its own System Serial Number)

Bezel Removed




AFF A320

 
存储系统背面、在插槽2下。



AFF A400 \ C400 ASA A400 \ C400


存储系统背面、控制器手柄下方右侧。

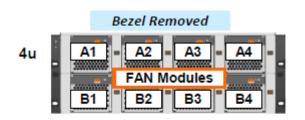




AFF A700


存储系统背面、PCM手柄的侧面。

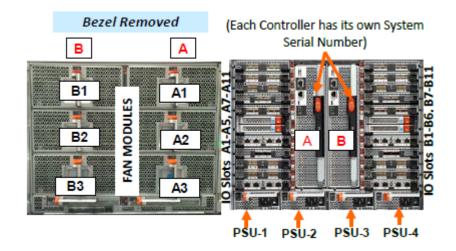

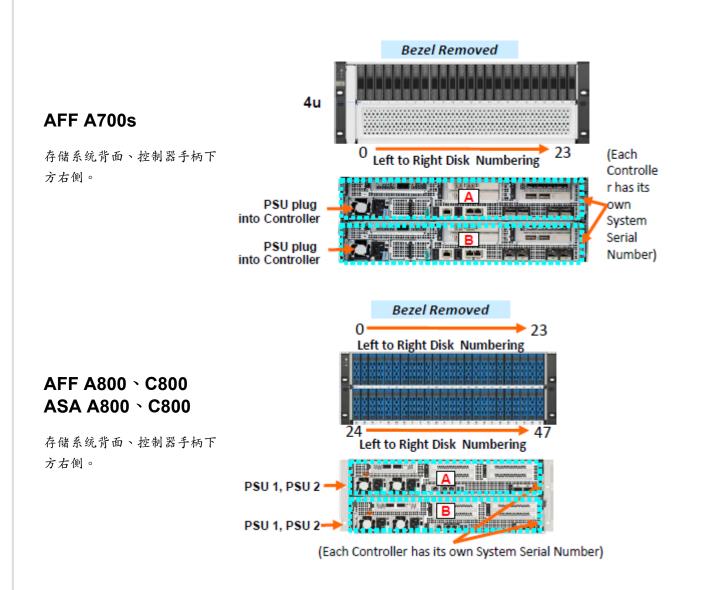


AFF A900

存储系统背面、PCM手柄的 侧面。

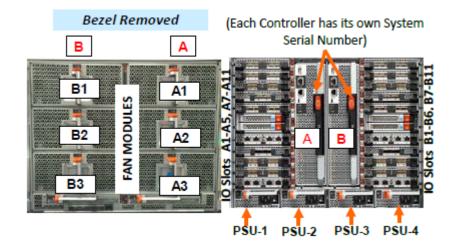


AFF8020

存储系统背面右下角。

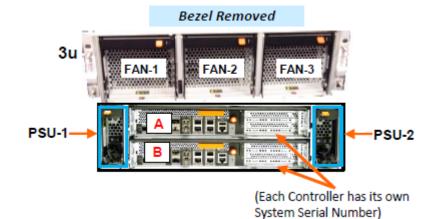

AFF8040 \ AFF8080

存储系统背面右下角。

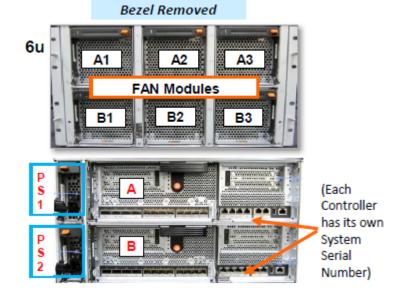

注:

• ONTAP 9 -在命令行界面中、键入: system controller show

追加信息

序列号位于FAS存储系统的哪个位置?