



## StorageGRID 设备进入维护模式后陷入重新启动

[https://kb-cn.netapp.com/hybrid/StorageGRID/Platforms/StorageGRID\\_Appliance\\_stuck\\_in\\_Rebooting...](https://kb-cn.netapp.com/hybrid/StorageGRID/Platforms/StorageGRID_Appliance_stuck_in_Rebooting...)

Updated: Thu, 23 Apr 2026 05:35:11 GMT

### 适用于


- NetApp StorageGRID 11.5
- NetApp StorageGRID 设备

### 问题描述

- 将 StorageGRID 设备置于维护模式：

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'

- 从 Grid Manager 中，选择节点，选择设备存储节点。选择任务 > 维护模式
- 从 Grid Manager 中，设备卡在重新启动状态：

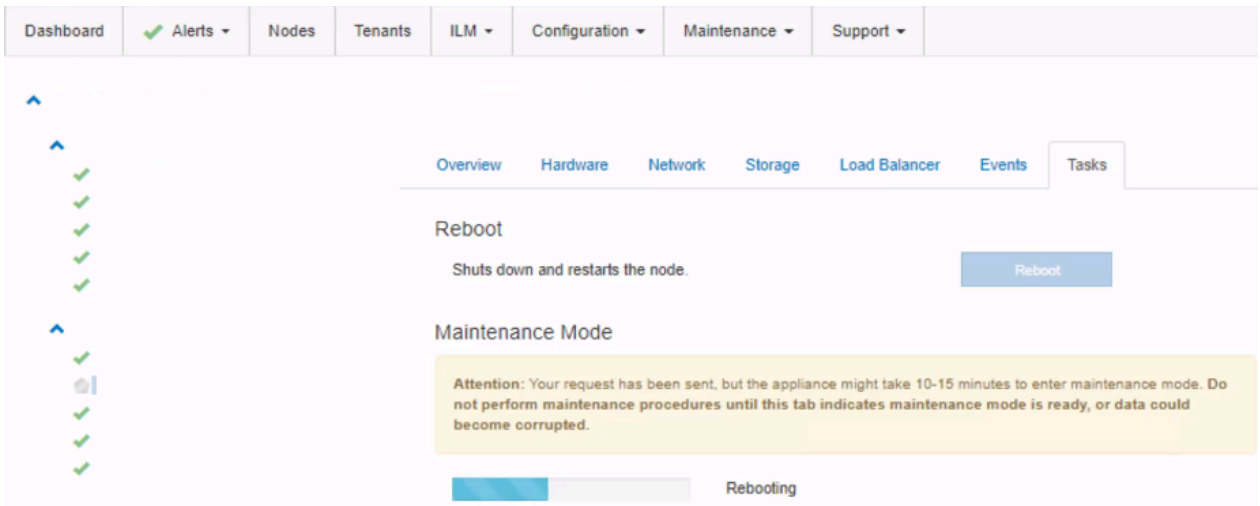

- 从设备控制台（例如，通过 SG1000 上的 BMC），设备已启动到 StorageGRID Appliance Installer（维护模式，**BOOT CODE = HO**）：

```

BOOT CODE = HO (The StorageGRID Appliance Installer is running)
HO -- --
[ 125.404421] IPv6: ADDRCONF(NETDEV_UP): utm0: link is not ready
[ 126.591119] EXT4-fs (sda2): mounted filesystem with ordered data mode. Opts: (null)
HO -- --
HO -- --
StorageGRID-PGE login: _

```

- 能够通过 <https://<appliance IP>:8443> 访问 StorageGRID 设备安装程序
- 能够从 StorageGRID 设备 安装程序将设备重新启动到正常节点：
  - 高级 > 重启控制器 > 重启到 **StorageGRID**