



如何进入 LOADER 提示符的解决指南

 $https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/How_to_get_to_the_LOADER_prompt_Resol...\\$

Updated: Mon, 06 Oct 2025 01:10:11 GMT

适用于

- ONTAP 9
- Data ONTAP 8 7-模式
- AFF 系统
- FAS 系统
- ASA 系统
- LOADER

说明

• LOADER 提示符用于低级系统管理、诊断和恢复。

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'

· 本文中列出了访问 LOADER 提示符的不同方法。			