



A800机箱温度过热:环境温度警告过高

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/A800_Chassis_temperature_is_too_hot__Am...

Updated: 周五, 11 7月 2025 11:43:01 GMT

适用场景

AFF A800

问题描述

• 此时将生成并清除以下警报:

```
[node1: env_mgr: monitor.shutdown.chassisOverTemp:EMERGENCY]: Chassis
temperature is too hot: Ambient temperature is warning high. System will
be shutdown in 2 minutes
[node1: env_mgr: monitor.chassisTemperature.warm:alert]: Chassis
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'

temperature is too warm: LED Board Temp1 is warning high (43 C). [node1: env_mgr: monitor.shutdown.cancel:notice]: Automatic shutdown sequence canceled. [node1: env_mgr: monitor.chassisTemperature.ok:notice]: Chassis temperature is ok.