



节点崩溃、无法启动、并出现错误崩溃：rootfs.uzip

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/Panics_and_fails_to_boot_with_error_panic_...

Updated: 周三, 09 7月 2025 14:36:58 GMT

适用场景

- AFF A150 / ASA A150
- AFF C190
- AFF A200 / FAS2620 / FAS2650
- AFF A220 / FAS2720 / FAS2750
- AFF A300/FAS8200
- AFF A700/FAS9000
- AFF A700
- FAS2820
- 启动设备

问题描述

启动设备遇到问题描述的节点将发生崩溃或无法从Loader启动、我们会看到以下消息之一：

EMS日志：

- PANIC: g_vfs_done(): rootfs.uzip read error - suspect boot device in process g_up on release 9.7P4 (C) on Tue Aug 11 02:55:33 EDT 2020
- PANIC: Process mgwd unresponsive for 158 seconds (mgwd startup: "(2139)") in process nodewatchdog
- PANIC: Process vifmgr unresponsive for 658 seconds in process nodewatchdog on release 9.7P18
- panic: g_vfs_done():md0.uzip[READ(offset=XXXXXXXXXX, length=XXXX)]erovm_fault: pager read error, pid XXXX (notifyd) fs=ufs [attempt 10]
- PANIC : vm_fault: page read error for pid X (notifyd) fs=ufs, tries=10.

控制台日志-无法启动：

```
md0.uzip: UZIP(zlib) inflate() failed
```

```
Could not load fat://boot0/X86_64/freebsd/imagel/kernel:Device not found
```

```
ERROR: Error booting OS on: 'boot0' file: fat://boot0/X86_64/freebsd/imagel/kernel (boot0,fat)
```

```
*** command status = Device not found(-6)
```