



ANDU 已暂停: (节点"node02"在交还后未处于"连接"状态。)

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/ANDU_Paused_Node_node02_is_not_in_co... Updated: 周五, 11 7月 2025 14:56:12 GMT

适用场景

ONTAP 9.10.1

问题描述

• ANDU u pgrade 暂停,因为节点在根聚合交还后未处于 UP 状态。

The node state 'SF_CLUSTERWAIT' changes to SF_UP takes more than 15 minutes.

• EMS 消息指出节点在交还后未处于"连接"状态。

```
Tue Jan 17 13:58:49 +0000 [node1: upgrademgr: upgrademgr.update.pausedErr:error]: The automated update of the cluster
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'

has been paused due to the following reason: Node "node1": Error: {Node "node1" is not in "connected" state after giveback.}, Action: {Use the "storage failover show" command to verify that node "node2" is in the "connected" state, and then use the "cluster image resume-update" command to resume the update.}.