



## 广播域默认值会在节点上划分为2个组

 $https://kb-cn.netapp.com/on-prem/ontap\_OS/OS-KBs/Broadcast\_domain\_Default\_is\_partitioned...$ 

Updated: 周五, 11 7月 2025 13:10:26 GMT

## 适用场景

- ONTAP 9
- 广播域

## 问题描述

EMS.log:

vifmgr.bcastDomainPartition: Broadcast domain Default is partitioned into 2 groups on node node01. The different groups are: {e0M}, {e0c, e0d}. LIFs hosted on the ports in this broadcast domain may be at the risk of seeing connectivity issues.

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'