



由于节点无法启动并显示错误g_vfs_done () ada0s1 write 、ANDU已暂停

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/ANDU_paused_due_to_the_node_failing_to...

Updated: 周五, 11 7月 2025 07:46:41 GMT

适用场景

- ONTAP 9.
- 自动无中断升级 (ANDU)

问题描述

- 由于节点未完全启动、ANDU会暂停。
- 通过SP/BMC对节点进行系统控制台访问时、发现该节点多次报告以下错误。

```
mount_msdosfs: /dev/ada0s1: Input/output error
```

```
g_vfs_done():ada0s1[WRITE(offset=16384, length=4096)]error = 5
```

```
g_vfs_done():ada0s1[WRITE(offset=16384, length=4096)]error = 5
```

- 此节点最终会在加载程序处停止。

```
g_vfs_done():ada0s1[WRITE(offset=16384, length=4096)]error = 5
Uptime: 1m20s
System halting...

Ready to boot.
Boot Loader version 6.4.15
Copyright (C) 2000-2003 Broadcom Corporation.
Portions Copyright (C) 2002-2023 NetApp, Inc. All Rights Reserved.
ACPI RSDP Found at 0x6caf0000
LOADER-A>
```