



## SP/BMC 传感器显示 CPU 温度为零下 (-57 C)，这是正常的吗？

[https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/SP\\_BMC\\_sensor\\_showing\\_minus\\_temperatu...](https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/SP_BMC_sensor_showing_minus_temperatu...)

Updated: 周五, 11 7月 2025 10:06:40 GMT

### 适用场景

- ONTAP 9
- AFF/FAS 平台
- SP / BMC

### 问题解答

是

SP/BMC 日志中的负温度值（负度）是传感器的正常值。示例：

```
::> system node environment sensors show -node * -type thermal
```

Node	Sensor	State	Value/Units	Crit-Low	Warn-Low
Warn-Hi	Crit-Hi				
----	-----	-----	-----	-----	-----
node-01	CPU1 DTS Temp	normal	-58 C	-	-
-10	0				
	CPU2 DTS Temp	normal	-57 C	-	-
-10	0				

## 追加信息

其他信息文本