



机箱电源降级并很快自动恢复

https://kb-cn.netapp.com/on-prem/ontap/OHW/OHW-KBs/Chassis_power_supply_is_degraded_and_a...

Updated: Sat, 25 Apr 2026 10:18:28 GMT

适用于

- ONTAP 9
- AFF A400 、 AFF C400 、 ASA A400 、 ASA C400 、 FAS8300 、 FAS8700
- PSU

问题

机箱 PSU 降级并自动恢复：

```
[node01: env_mgr: monitor.chassisPowerSupply.degraded:debug]: Chassis power supply 1 is degraded: PSU1 PIN is Warning Low (14200 mW)
[node01: power_low_monitor: monitor.chassisPower.degraded:debug]: Chassis power is degraded: Power Supply Status Critical: PSU1.
[node01: power_low_monitor: callhome.chassis.power:debug]: Call home for CHASSIS POWER DEGRADED: Power Supply Status Critical: PSU1.
[node01: monitor: monitor.globalStatus.critical:debug]: Power Supply Status Critical: PSU1.
```

```
[node01: env_mgr: monitor.chassisPowerSupply.ok:debug]: Chassis power supply 1 is OK.
[node01: power_low_monitor: monitor.chassisPowerSupplies.ok:debug]: Chassis power supplies OK.
[node01: monitor: monitor.globalStatus.ok:debug]: The system's global status is normal.
[node01: env_mgr: callhome.chassis.ps.ok:debug]: Call home for CHASSIS POWER SUPPLY OK: PS 1
```

```
[node1: env_mgr: monitor.chassisPowerSupply.degraded:notice]: Chassis power supply 1 is degraded: PSU1 InCurrent is Critical Low (0 mA)
[node1: env_mgr: monitor.chassisPowerSupply.degraded:notice]: Chassis power supply 1 is degraded: PSU1 InPower is Critical Low (0 W)
[node1: env_mgr: monitor.chassisPowerSupply.off:notice]: Chassis power supply 1 off.
[node1: env_mgr: monitor.chassisPowerSupply.ok:info]: Chassis power supply 1 is OK.
```

```
[node01: env_mgr: monitor.chassisPowerSupply.degraded:debug]: Chassis power supply 1 is degraded: PSU1 VIN is Warning Low (92000 mW)
[node01: power_low_monitor: monitor.chassisPower.degraded:debug]: Chassis power is degraded: Power Supply Status Critical: PSU1.
[node01: monitor: monitor.globalStatus.critical:debug]: Power Supply Status Critical: PSU1.
[node01: env_mgr: monitor.chassisPowerSupply.ok:debug]: Chassis power supply 1 is OK.
```