



## 如何将FC-LAG替换为Brocade交换机中的动态端口组重新平衡

https://kb-cn.netapp.com/on-prem/Switches/Brocade-KBs/How\_to\_replace\_FC-LAG\_with\_Dynamic\_Po... Updated: 周五, 11 7月 2025 08:03:45 GMT

## 适用场景

Brocade 交换机上的端口

## 问题描述

本文介绍如何将FC-LAG替换为Brocade交换机中的动态端口组重新平衡、因为从固件4.3开始、FC-LAG将无法在Brocade和Cisco UCS之间运行。

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information contained herein may be used solely in connection with the NetApp products discussed in this document.'