



合作伙伴节点升级后，ONTAP 升级无法在一个节点上启动

https://kb-cn.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/ONTAP_Upgrade_does_not_start_on_on...

Updated: Thu, 16 Apr 2026 11:03:27 GMT

适用于

ONTAP 升级

问题

- 配对节点成功升级后，ONTAP 升级无法在一个节点上启动：

```
::> cluster image show-update-progress
```

High Availability Error: Storage failover is not configuration enabled on node "node-01", status check "node-02".

Action: Ensure storage failover is enabled on all nodes before attempting NDU. To check for storage failover status, run "storage failover show".

- 上一次接管被否决：

```
::> storage failover show
```

```
                Takeover
Node   Partner Possible State           Description
-----
node-01 node-02 false    Connected to node-02. Previous takeover attempt by
node-02 was aborted because operation was vetoed.
node-02 node-01 false    Connected to node-01. Previous takeover attempt
was aborted because operation was vetoed.
```

- 无法恢复升级：

```
::> cluster image resume-update
```

```
Error: command failed: Update is not in "paused" state, so it cannot be
resumed.
```