



RTFI 在 SolidFire 节点上失败，出现 UnhandledError pid=1 脚本 “\${ROOT_DRIVE_REAL}”

https://kb-cn.netapp.com/on-prem/SolidFire/Element_OS_Kbs/RTFI_fails_on_SF_node_with_Unhandle...

Updated: 周三, 09 7月 2025 14:28:29 GMT

适用场景

- NetApp Element操作系统
- NetApp SolidFire SF系列节点
- NetApp SolidFire H系列节点

问题描述

使用 USB 密钥对 SF19210 和 H610S 节点进行手动 RTFI 失败，并出现以下错误：

- 示例：SF1920 节点

- `[UnhandledError pid=1 cmd=parted --script "${ROOT_DRIVE_REAL}" mktable msdos`



- 例如：H610S

- `[Caught SIGTERM pid=1 cmd=ROOT_DRIVE_REAL="$(readlink -e
$(ROOT_DRIVE))"]`



[Caught SIGTERM pid=1 cmd=ROOT_DRIVE_REAL="\$(readlink -e \${ROOT_DRIVE})"]

0%

Options: (Reboot,PowerOff,Exit,UploadLogs.)

